


## HOSEL ADAPTER SETTING CHART

#	LOFT	LIE	FACE ANGLE
1-STD	11°	57°	0°
2	10°	56°	2° Open
3	9°	57°	4° Open
4	10°	58°	2° Open
5	11°	59°	0°
6	12°	58°	2° Closed
7	13°	57°	4° Closed
8	12°	56°	2° Closed

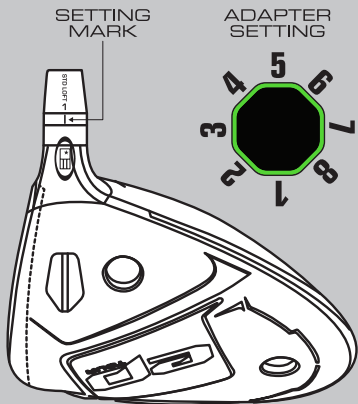

- With wrench, loosen screw at hosel until you are able to pull the shaft out of the driver head.
- Rotate the shaft so that your desired adapter setting (1-8) aligns with the mark.
- Push the shaft into the head and tighten screw with torque wrench until it clicks twice.
- You're all set and ready to hit bombs!

## SHOT SHAPING TRAJECTORY CONTROL

### LEGEND

10  
**HEAVY WEIGHTING**  
(10 GRAMS)

6  
**MID WEIGHTING**  
(6 GRAMS)

2  
**LIGHT WEIGHTING**  
(2 GRAMS)

**CENTER OF GRAVITY**

